




## Boiler Separation Plate Heat Exchanger Connection Configuration.

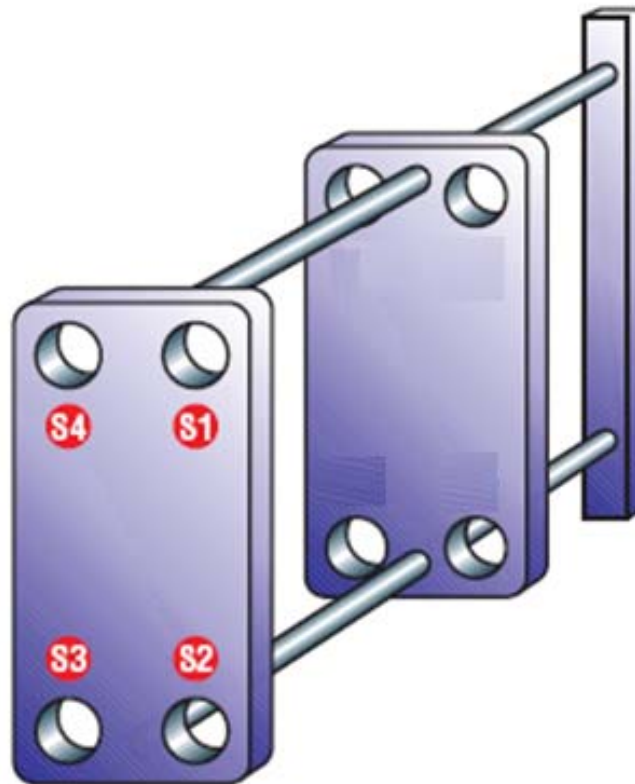


Connections

Connection	Description
S1	Flow to System
S2	Return to Boiler
S3	Return From System
S4	Flow From Boiler



## Boiler Separation Plate Heat Exchanger Dismantling/Reassembly Procedure.

To ensure correct operation of the plate the securing bolts must be adjusted in the sequence indicated below. Both for dismantling and reassembly.

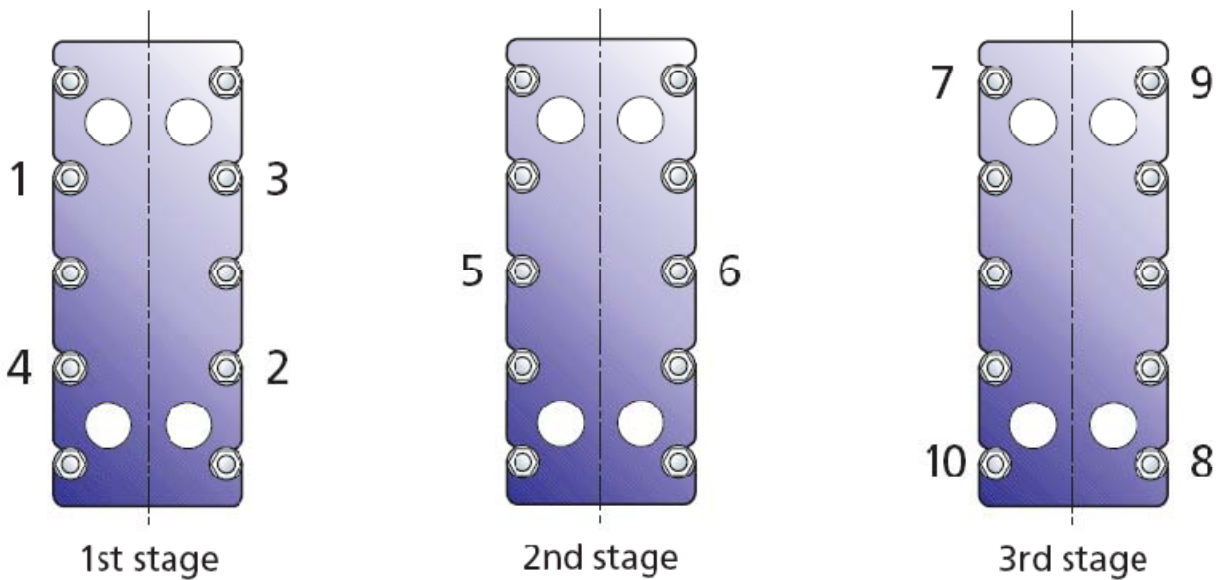

To ensure that the plate is reassembled to the correct dimension it is advisable that the dimension L (on all sides) is taken prior to dismantling.

